



# ECO/SELF 800



## 1. Unpacking and Installation

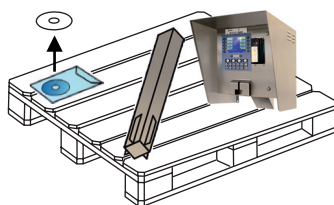


Remove the terminal, the support and the packet containing the documentation and the CD from their wrapping on the pallet.

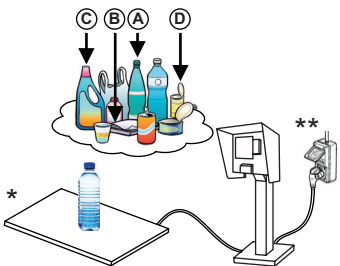

**CAUTION!!**  
Must be installed by a specialized technician (consult the installation manual).

### ECO 800 WASTE WEIGHING MODE

- A. Glass
- B. Paper
- C. Plastic
- D. Metals

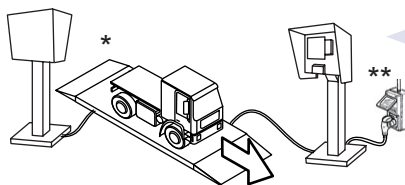

### SELF 800 VEHICLE WEIGHER



If the protection is padlocked (\*), open at beginning of shift.



Use the disconnecter to turn the terminal on and off (\*\*).

\* Not included

\*\* At customer's charge

## 2. Display and keyboard

|  |                           |  |                                         |
|--|---------------------------|--|-----------------------------------------|
|  | Stable weight             |  | Center zero                             |
|  | Tare                      |  | Tare entered via keyboard               |
|  | Gross weight              |  | Gross weight in pounds                  |
|  | Minimum weight            |  | Net weight                              |
|  | Weighing range indication |  | Unit of measurement of weight displayed |

|  |                        |  |                                    |
|--|------------------------|--|------------------------------------|
|  | Weight reset           |  | Tare entry and cancellation        |
|  | Tare entry and display |  | Printing and/or transmission start |
|  | Customizable keys      |  | Keys for moving cursor             |
|  | Numeric keys (0...9)   |  | Comma key                          |
|  | Enter                  |  | Keys for moving cursor             |
|  | Erasing key            |  | Space                              |

## 3. Personal access devices

Token or coin



Flash drive



Magnetic badge



Scanner



RFID



Optic badge with barcode



## DECLARATION OF CONFORMITY

N° ecoseif\_100101

**SOCIETÀ COOPERATIVA BILANCI AI A.R.L.**  
Via S. Ferrari, 16  
41011 Campogalliano (MO)- Italy

hereby declare under our responsibility that

the product: **Electronic weighing terminal ECO/SELF 800 and its optional equipment**

described in this declaration conforms to the following

**Directive EMC 2004/108/EEC**  
directives: **Electrical Safety Directive 2006/95/EC**  
**Weighing Instrument Directive 2009/23/EEC**

**Conformity is guaranteed by compliance with the following**

standards: EN 61000-6-3, EN 61000-6-4  
EN 60950  
EN 45501

The terminal is also suitable for the creation of non-automatic weighing instruments approved with the "CE Type Approval Certificate" in conformance with the requirements of Directive 2009/23/EEC (formerly 90/384).

The product bears CE marking.

Campogalliano, this day **1-1-2010**

Division Management  
Franco Brighenti

## WARNINGS



Do not install in places with potentially explosive gas or dust;



- This electrical or electronic device cannot be disposed of as solid urban waste.
- It must be disposed of separately.



Consult the Operation, Maintenance and Installation instructions in the CD for further information.




**SOCIETÀ COOPERATIVA BILANCI AI**  
Weighing Instruments and Technologies

Società Cooperativa Bilanciai Campogalliano - 41011 Campogalliano (MO) Italy  
Via S. Ferrari, 16 - Tel. +39 (0)59 893 611 - Fax +39 (0)59 527 079  
Web: <http://www.coopbilanciai.it> - E-mail: [cb@coopbilanciai.it](mailto:cb@coopbilanciai.it)  
Customer Assistance Service Tel. +39 (0)59 893 612 - Fax +39 (0)59 527 294

## 4. Self-service use (SELF 800)

1

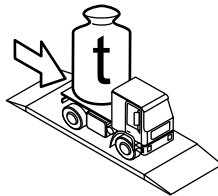


Drive vehicle on to weigh-bridge.

2



Use your personal identification device and take the weighing ticket.


3

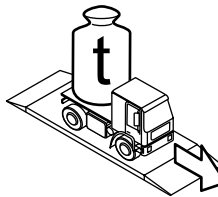

Drive vehicle off weigh-bridge.

## 5. Use as a public weighbridge (SELF 800)

1

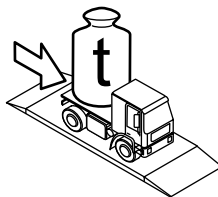

Drive vehicle on to weigh-bridge.

Get out of vehicle and go to terminal.


2



Insert a token or coin and take the weighing ticket.

Get back into vehicle.


3

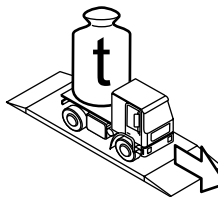

Drive vehicle off weigh-bridge.

## 6. Use as waste weigher (ECO 800)

1

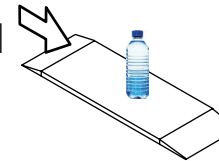

Load waste on weighbridge.

2




Select the type of waste and pass your identification badge through.

3



Print the ticket.

4

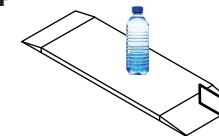

Remove waste from weigh-bridge.

## 6.

## Setup

- The user generally operates in the automatic mode, thus the functions accessible via the menu are not enabled.
- Customizing is reserved to the administrator.
- Consult the CD with the use and maintenance manual in order to access the functions.